FRAME STICKER INSTALLATION GUIDE

ERIDE PRO SR / SS

PREPARATION

WHAT'S INCLUDED

- Pre-cut frame stickers, ready to fit
- Squeegee for applying the film
- Extra film for touch-ups

WHAT YOU'LL NEED

- A standard hairdryer
- Utility knife
- Degreaser (e.g. surgical spirit)
- Cloth



1


Clean & degrease the surfaces

Thoroughly clean and degrease all bonding surfaces on the frame with surgical spirit and a cloth. Then let everything dry completely — residue stops the film from sticking.

2

Get to know the cut contours

In some spots the contours may still cling slightly and not be cut all the way through, so familiarise yourself with every contour and check that each part comes away as intended.

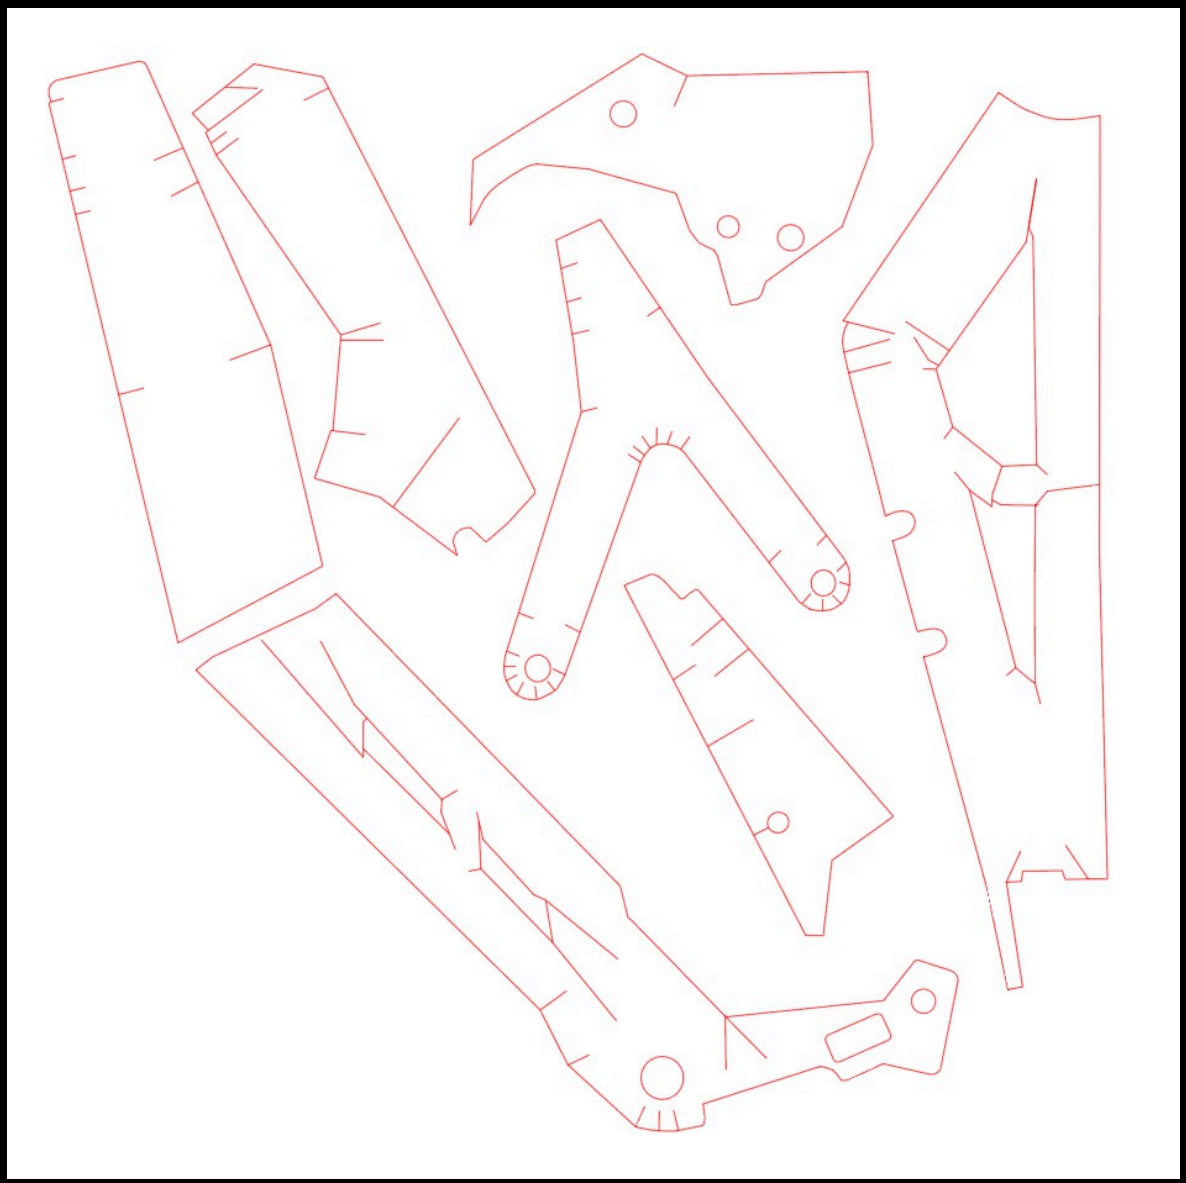

3 Use reference points & apply the stickers

Use our recommended reference points to place each part exactly on the frame. Below is an example for each sticker to orient yourself.

FOLLOW THE RIGHT ORDER

The stickers are numbered — it is best to apply them in exactly this order.




STICKER 1



STICKER 2




STICKER 3

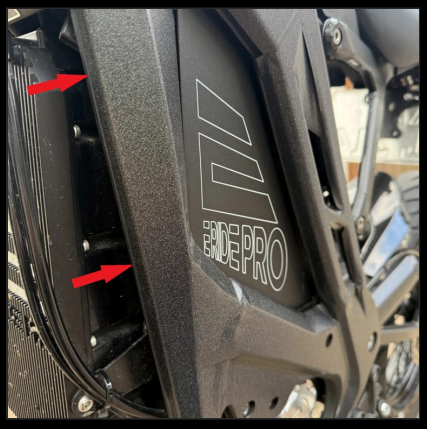


STICKER 4



STICKER 5

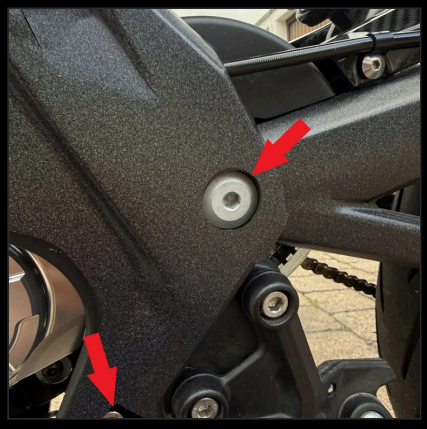

STICKER 6

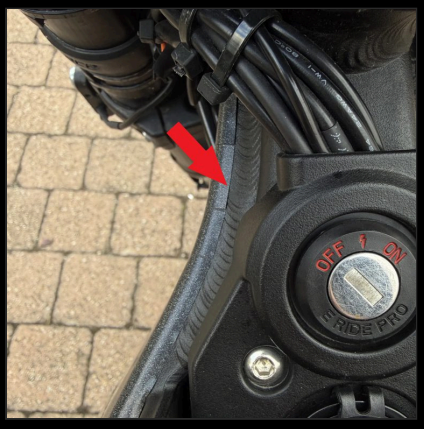



STICKER 7

4

Check the cut edges

Before you continue, check that all edges and corners have been cleanly separated. Compare your stickers with the contour template above to see every cut precisely. If needed, re-cut carefully with the utility knife.



5

Position loosely & check

First just hold the sticker loosely in place by hand. Check the placement and whether the edges sit flush with the frame.



6 Set the film with a hairdryer

Use the hairdryer to properly set all edges so they stay firmly bonded to the frame.

- You can go very close with the hairdryer and set it to a high setting
- Ease in carefully: move closer gradually, keep testing and increase the heat step by step
- Smooth from the inside out with your hand or the squeegee and fold the film over
- Run your fingers firmly over the film so it sits tight

7 Touch up with the cutter

Where something doesn't sit 100 %, re-cut it cleanly with the utility knife and press it back down.



8

Touch up with extra film

If a part doesn't sit perfectly, fix it with the extra film: cut out a small piece, lay it over the spot, warm it briefly with the hairdryer and press it on.

DONE!



Questions about installation or fit? Message us by email at **info@tqcustoms.eu** or directly on TikTok. And be sure to watch our TikTok tutorial — linked on our website.